


CF07

Honda Africa Twin XRV 650(RD03)

Fitting kit:

ID	Description	Cat.N	Qt
1	Bolt M10x30	888	4
2	Washer M10	804	6
3	Alu. spacers	122	2
4	Bolts M6x70	871	2
5	Washer M6	947	2
6	Nut M10	810	2
7	Black Steel holder bigger	X75	1
8	Black Steel holder small	X37	1
9	Bolt „U” shape	X45	1
10	Alu. Spacers	1184	1

We recommend use adhesive glue during assembly. Medium strong.

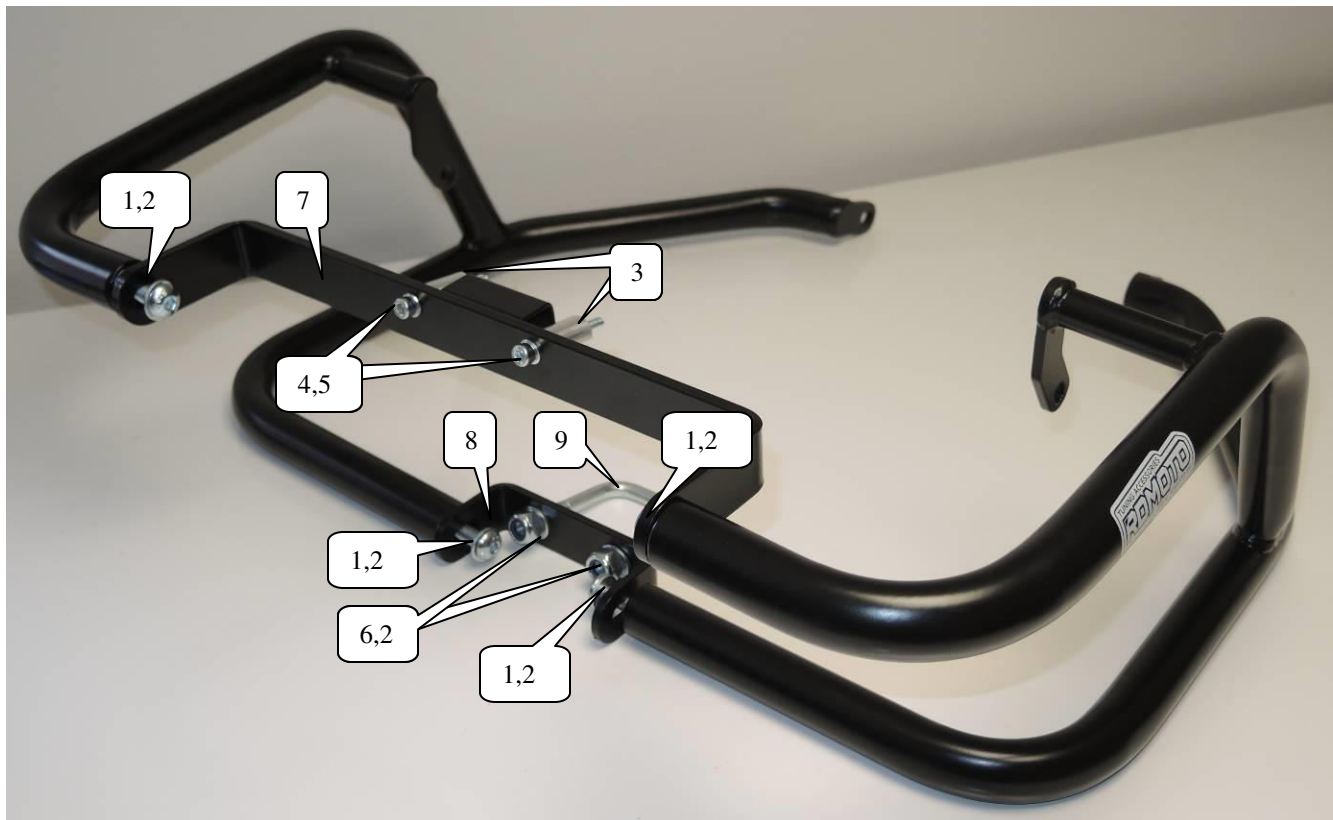



For rear gripping use original bolts and nuts. Look out- You have to chase left spacer for right side spacer.