

# CF42

## Honda XLV 700 Transalp 2007-

### Fitting kit for left side:

Not.	Popis	Kat.číslo	Počet
1	Cash bar		1
2	Steel adapter- thread M8	X36	1
3	screw M8x45mm	820	2
4	washer M8 (flat)	802	2
5	Nut M8 (with pad)	812	2
6	Alluminum cylinder D 10mm	437	2
7	screw M8x110mm	844	2
8	RDmoto stickers		1
9	screw M10x30x1,5	888	1
10	washer M10 (spring)	801	1
11	stickers 3M		1

### Fitting kit for right side:

Not.	Popis	Kat.číslo	Počet
1	Cash bar		1
2	Aluminium cylinder D 27	123	2
3	washer M6	947	2
4	screw M6x50	972	2
5	screw M10x30x1,5	888	1
6	washer M10 (spring)	801	1
7	stickers 3M		1
8	RDmoto stickers		1
9	Plastic cap	X5	2

### Fitting kit for front side:

1	Steel adapter- black	X37	1
2	Stainless steel bracket- thread M10	X38	1
3	Nut M10 (safety)	810	2
4	washer M10 (flat)	804	2
5	Plastic cover M10	X35	2
6	bolt M6x50	867	2
7	washer M6 (flat)	947	2
8	Aluminium cylinder D 13mm	479	2
9	screw M6x30	864	1
10	nut (safety)	948	1
11	washer M6 (flat)	947	2
12	Stickers 3M		1

### Mounting instruction :

Make the installation of the crash bar according to the instruction on the below attached photos.

**Warning – we recommend to use safety glue on threads of all bolts (medium strong – blue colour).**

A. Remove plastic cover under the engine.


B. Remove original screws at foot brake pump.

A.



B.

**Front side:**

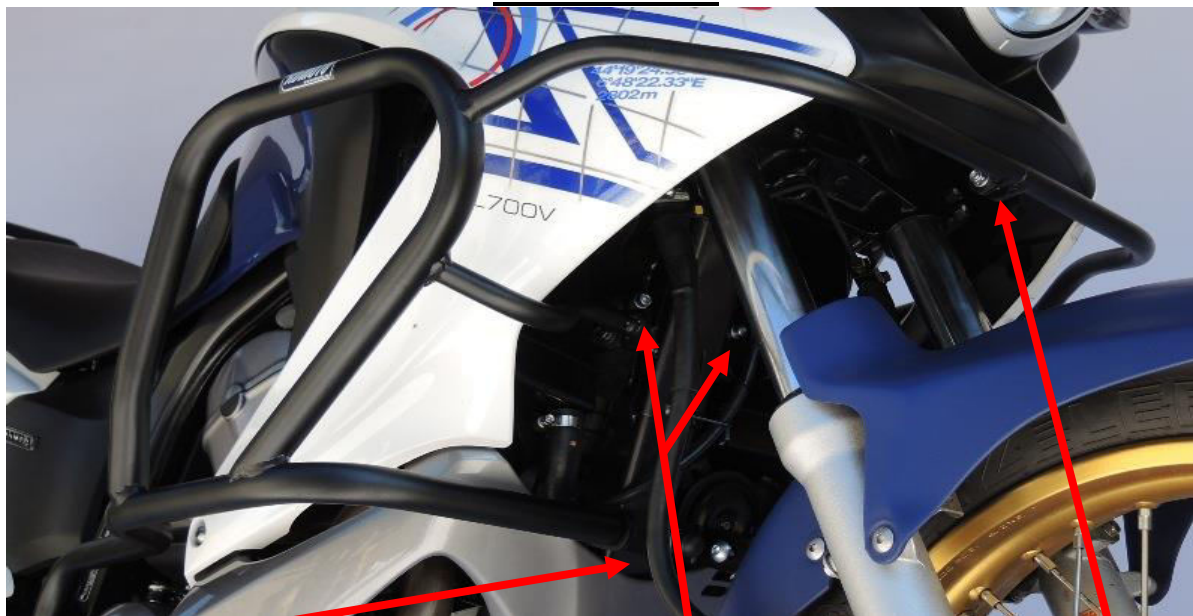

On the frame instalation of steel adapter (not. 1), stick on it 3M sticker (not.12). Steel adapter mount with stainless bracket (not. 2). For fixed use washers and nuts (not. 3.,4.) Put the plastic cover (note 5.)

Remowe original screws. Between crash frame and motorcycle frame put Al roller D 13mm (not.8), fixed screws M6 (note. 6.,7.).

Push a frames together. Fixed with washer(not.11) screw (not.9) and nut (not. 10).


**Right side:**



Note 2. Aluminium cylinder D 27 put between crash frame and bike frame  
Fixed with screws and washers (note. 3.,4.)  
Plast. cover

Frame fixed on the steel adapter with screw M10 (not.5) and washer(note 6.)  
Frame is fixed on the cooler holder.

**Left side:**

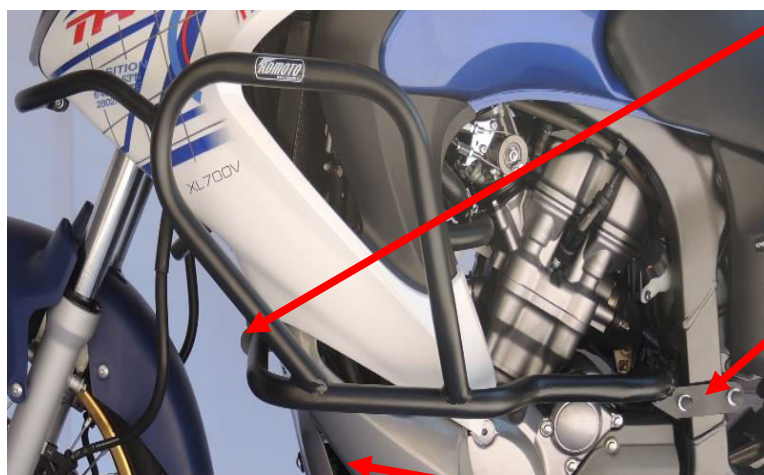

Frame fixed on the steel adapter with screw M10 (note 9) and spring washer.

To join the crash frame and bike frame, steel adapter (note 2) screw M8 (note.3), washer M8 (note.4), nut M8 (note5), stickers 3M.

Dismantle both original frame bolts at the horn. Between the horn bracket and a steel plate put alluminium cylinder D10 (note 6), with a washer and screw M8X110 (note 7) is pulled. We use the orig nuts.