

CF50

Kawasaki Versys 650 '15-

Kit for left side:

ID.	Description	Kat.	Qt
1	Cash bar	CF50	1
2	Bolt M6x50	867	1
3	Washer M6	987	1
4	Spacer d=12mm	120	1
5	Bolt M10x120	881	1
6	Washer M10	804	2
7	Nut M10	814	2
8	Steel rod 10x300x30x30		1
9	Spacer d=82mm	1175	1

Kit for right side:

ID.	Description	Kat.	Qt
1	Cash bar	CF50	1
2	Bolt M6x50	867	1
3	Washer M6	987	1
4	Spacer d=12mm	120	1
5	Bolt M10x160	979	1
6	Washer M10	804	2
7	Nut M10	814	2
8	Bolt M8x25	833	1
-	-	-	-

Assembly instruction:


We recommend to use glue of threads, medium strong. During the assembly.



Bolt M6x50 + washer M6.
Place spacer d=12mm. Under
the cash bar.

Bolt M10x120 + washer
M10. For tighten use nut
M10. Replace original nut.
Original silentblock leave on
the frame.

Take out orig. bolt M10x200.
Insert rod M10x300 throught
the engine. Insert spacer
d=82mm. For tighten use nut
M10 + washer M10.

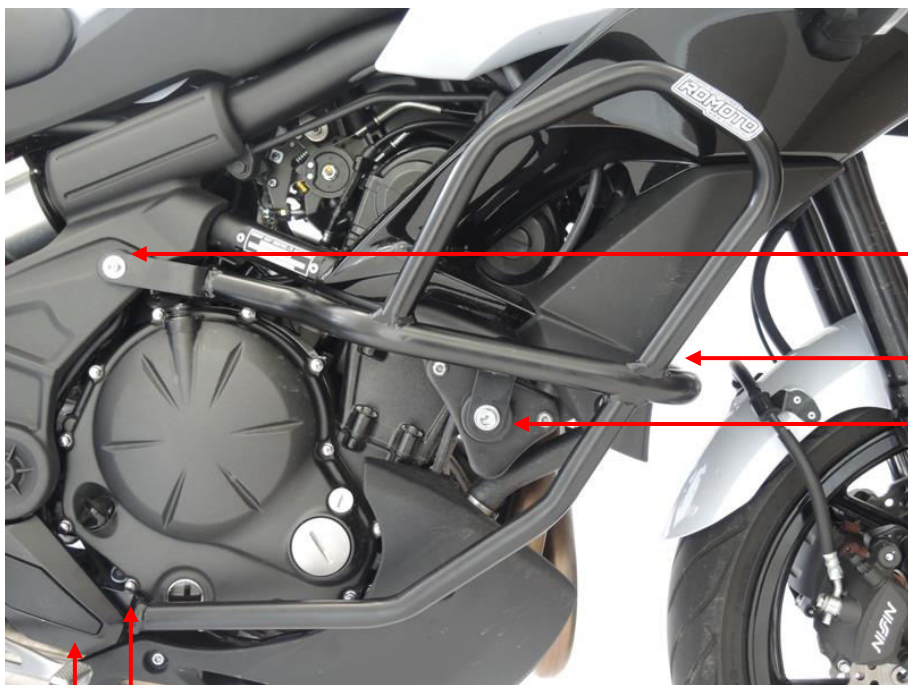

Bolt M6x50 + washer M6.
Place spacer d=12mm. Under
the cash bar.

For connecting use bolt
M8x25.

Bolt M10x160 + washer M10.
For tighten use nut M10.
Replace original nut. Original
silentsblock leave on the frame.

Take off plastic cover and footpeg holder. Mounting nut and
washer M10 for tighten .
Place cash bar under the footpeg holder. Use original bolt for
tighten. Mounting footpeg and cover back the bike.

