

# CF52

## Suzuki DL 1000 V-Strom 2014-

### Fitting kit left side:

ID	Description	Cat.N	Qt
1	Crash frames	CF52	1
2	Alu. spacer d=24 front	1184	1
3	Alu. spacer d=17,5 rear	1183	1
4	Bolt M10x100x1,25	892	1
5	Washer M10	804	1
6	Plastic cover	X4	1
7	Nut M12	811	1

### Fitting kit right side:


ID	Description	Cat.N	Qt
1	Crash frames	CF52	1
2	Alu. spacer d=19,5 front	1121	1
3	Alu. spacer d=30 rear	170	1
4	Bolt M10x75x1,25	938	1
5	Washer M10	804	1
6	Plastic cover	X4	1
7	Nut M12	811	1

### Anathore materials for assembly:


ID	Description	Cat.N	Qt
9	Connecting bar 12x370x30x30mm		1
10	Bolt M8x20	823	1
11	Bolt M6x30	863	1
12	Nut M6	948	1
13	Washer M6	947	2

**Assembly procedure have be done according to the attached photos below.**

**Note: During installation, we recommend using glue on the threads (blue color).**

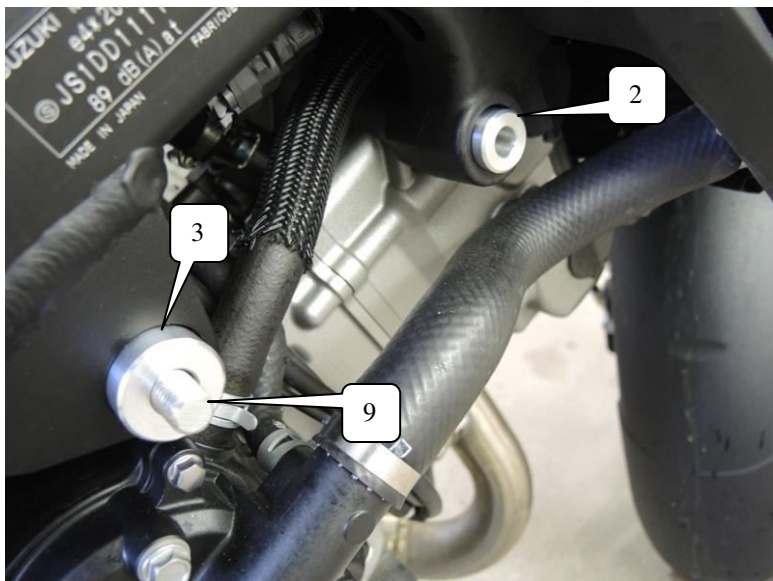

Dismantle original bolts from frame, place steel bar M12 ID.9 through the frame. Place spacers as shown on the picture.

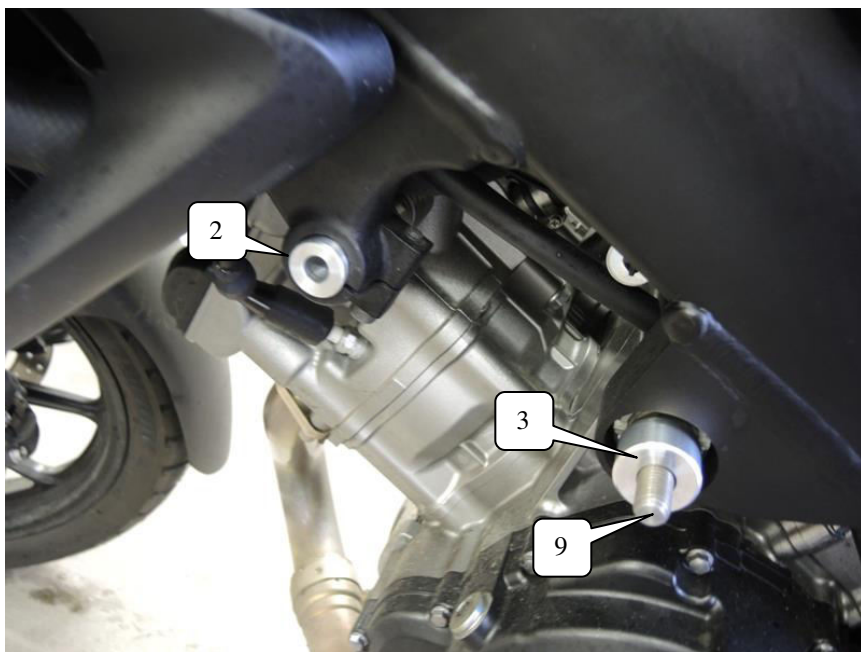

Crash frame  
assembly by bolt  
M10x100x1,25 with  
washer.

For rear gripping use  
nut M12.





Crash frame assembly by bolt M10x75x1,25 with washer.

For rear gripping use nut M12.

Connect the lower and upper frames them together. For lower part place bolt M8. For upper part use bolt M6 + 2x washer + nut M6.

