

# CF59

## Triumph Tiger 1050

### Left side:


ID	Description	Cat.N	Qt
1	Alu. spacer d=4mm	119	1
2	Bolt M12x60x1,25	916	1
3	Washer M12	803	3
4	Nut M12	811	1
5	Spacer d=16mm	127	1
6	Bolt M12x120	968	1

### Right side:

ID	Description	Cat.N	Qt
1	Alu. spacer d=9mm	1197	1
2	Bolt M12x90	808	1
3	Washer M12	803	4
4	Nut M12	811	2
5	Spacer d=26mm	1198	1
6	Bolt M12x120	968	1
7	Bolt M8x25	833	1
8	Washer M8	802	1

**Make assembly attached pictures.**

**Warning: During assembly use medium strong glue for all bolts.**

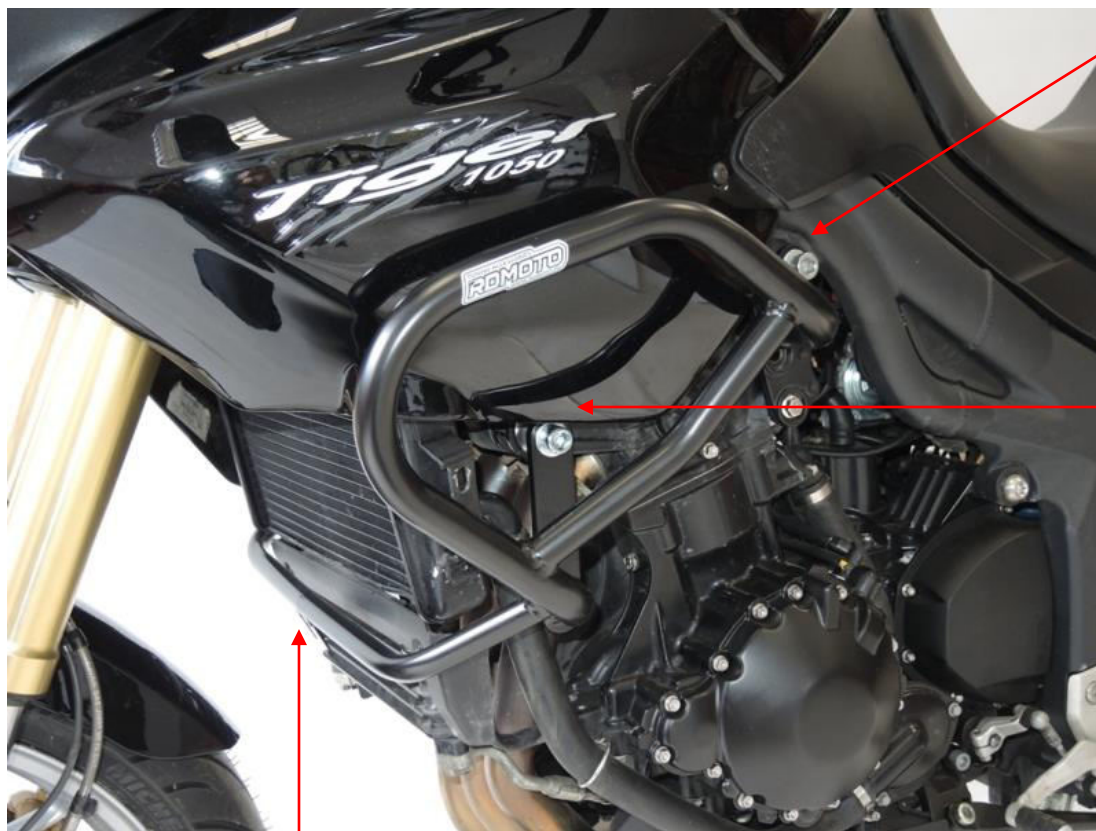

Bolt M12x60x1,25 + washer M12.  
Spacer d=4mm.

Spacer d=16mm.  
Bolt M12x120 + washer M12 (2x) + nut M12.

Connect crash bars and use bolt M8 + washer M8.



Spacer d=9mm.  
Bolt M12x90 + washer M12  
(2x) + nut M12.

Spacer d=26mm.  
Bolt M12x120 + washer  
M12 (2x) + nut M12.