

CF64

Honda CBF600 (2008-2012)

Left side kit

ID	Description	Cat.no.	Pcs
1	Crash frames	-	1
2	Nut M10 – safety	810	1
3	Washer M10 – flat	804	1
4	Bolt M10x70mm	851	1
5	Dural. cylinder - 14mm	114	1
6	Bolt M12x85x1,25	899	1
7	Plastic cap on M10 bolt	X4	2
8	Plastic cap on M12 bolt	X60	2
9	Cylinder - 5mm	456	1


Right side kit

ID	Description	Cat.no.	Pcs
1	Crash frames	-	1
2	Nut M10 – safety	810	1
3	Washer M10 – flat	804	1
4	Bolt M10x70mm	851	1
5	Dual. cylinder - 14mm	114	1
6	Bolt M12x70x1,25	937	1
7	Plastic cap on M10 bolt	X4	2
8	Plastic cap on M12 bolt	X60	2

Installation:

Mount crash frames according to the pictures below.

We recommend to use the glue on all threads (medium strong).

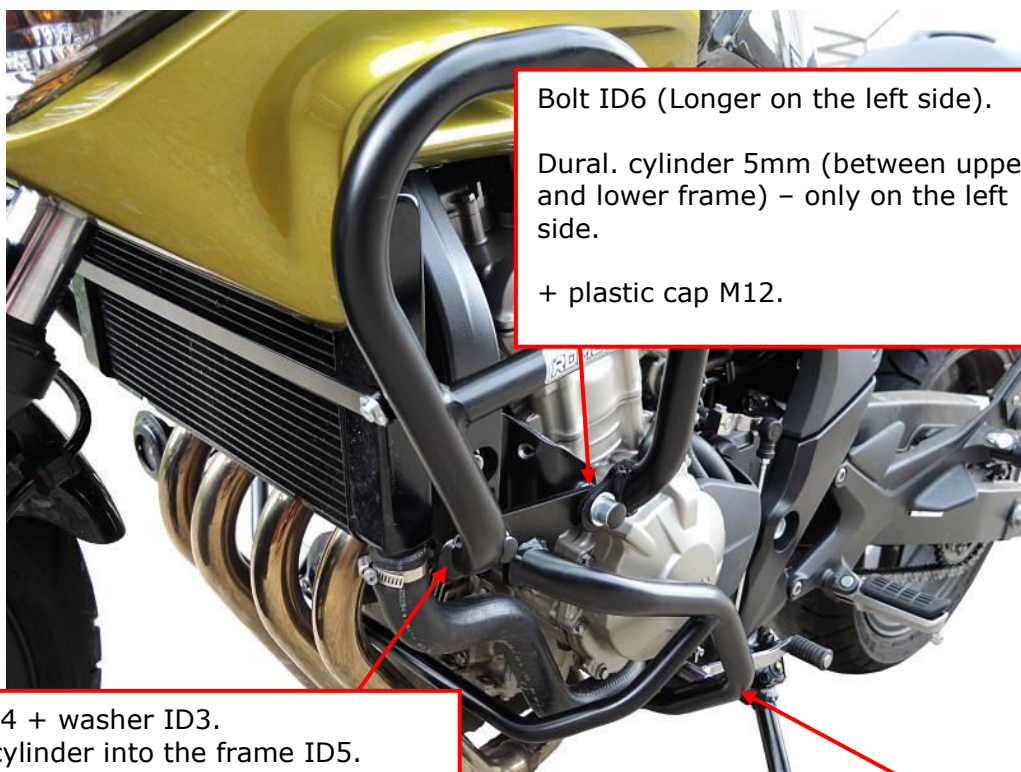

Bolt ID6 (Longer on the left side).

Dural. cylinder 5mm (between upper and lower frame) – only on the left side.

+ plastic cap M12.

Bolt ID4 + washer ID3.
Dural cylinder into the frame ID5.
Tighten using nut ID2.

+ plastic cap M10.

Original bolts.