

# CF46

## BMW R 1200GS Adventure 2014-


### Mounting kit for the left side:

ID	Description	Cat.no	Pcs
1	Bolt M8x35	861	1
2	Dural.cylinder - 15mm	465	1
3	Bolt M10x45	848	1
4	Washer M10	804	1
5	Washer M8	802	4
6	Bolt M8x25	833	1
7	Nut M8	812	1
8	Bolt M8x40mm	828	1
9	Plastic cap	X19	1
10	Bolt M8x25mm	831	1
11	Nut M8 (safety)	809	1

### Mounting kit for the right side:

ID	Description	Cat.no	Pcs
1	Bolt M8x35	861	1
2	Dural.cylinder - 15mm	465	1
3	Bolt M10x45	848	1
4	Washer M10	804	1
5	Bolt M8x30	834	1
6	Dural.cylinder - 8mm	1105	1
7	Nut M8	812	1
8	Washer M8	802	4
9	Bolt M8x40mm	828	1
10	Plastic cap	X19	1
11	Bolt M8x25mm	831	1
12	Nut M8 (safety)	809	1


**Install crash bars according to the pictures below.**

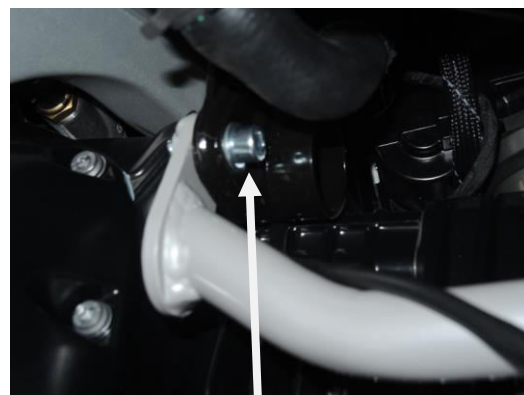

Bolt M8x25 ID6 + washer ID5.

For tightening lower part of crash frame use bolt ID3 and washer ID4.

For tightening upper part of crash frame use bolt ID1 and dural. Cylinder ID2.

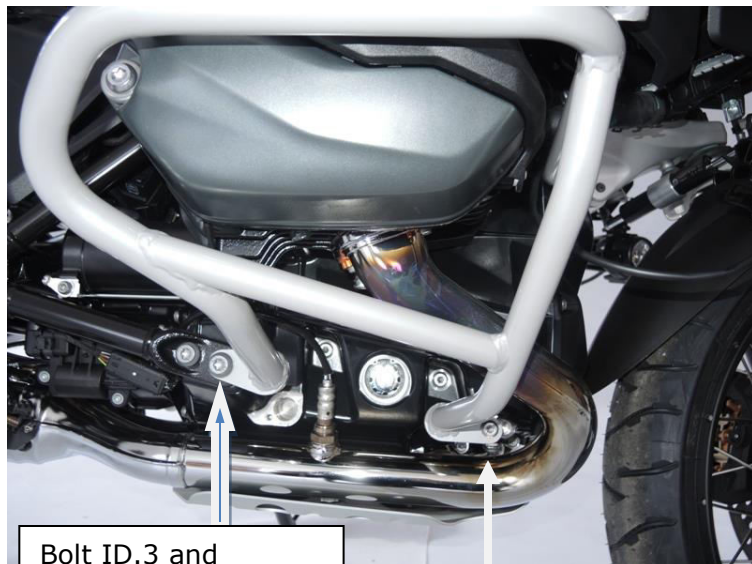

Bolt ID.3 and washer ID.4.

Dural cylinder ID.2.

Bolt ID.1+ washer ID.8



Dural cylinder ID.6.

Nut ID.7 and bolt M8x30 ID.5.



Bolt M8x40  
Washer M8  
Plastic cap

Bolt M8x25  
2xWasher M8  
Nut M8 (safety)

**We recommend to use the glue on all threads (blue colour – medium strong).**